



(Type A) Pipe Cleaning Nozzle



M6 Flexible Hose Nozzle (Outer Diameter = 9 mm)

Jet Configuration	Hole Diameter			
	0.5 mm	0.6 mm	0.7 mm	0.8 mm
3 backward	-	90.75.1028	90.75.1029	90.75.1030
1 forward + 3 backward	90.75.1087	90.75.1088	90.75.1089	90.75.1090

M7 Flexible Hose Nozzle (Outer Diameter = 9.5 mm)

Jet Configuration	Hole Diameter					
	0.5 mm	0.6 mm	0.7 mm	0.8 mm	0.9 mm	1.0 mm
2 backward	-	-	-	-	-	90.45.2409
3 backward	-	90.45.2417	90.45.2418	90.45.2419	90.45.2420	90.45.2421
4 backward	-	90.45.2429	90.45.2430	90.45.2431	90.45.2432	90.45.2433
1 forward + 2 backward	-	-	-	-	-	90.45.2469
1 forward + 3 backward	90.45.2476	90.45.2477	90.45.2478	90.45.2479	90.45.2480	90.45.2481
1 forward + 4 backward	-	-	-	90.45.2491	-	-

1/8 Flexible Hose Nozzle (Outer Diameter = 13.5 mm)

Jet Configuration	Hole Diameter				
	0.6 mm	0.7 mm	0.8 mm	0.9 mm	1.0 mm
3 backward	90.45.2785	90.45.2790	90.45.2795	90.45.2800	90.45.2805
4 backward	90.45.2845	90.45.2850	90.45.2855	90.45.2860	90.45.2865
1 forward + 3 backward	90.45.3085	90.45.3090	90.45.3095	90.45.3100	90.45.3105
1 forward + 4 backward	90.45.3145	90.45.3150	90.45.3155	90.45.3160	90.45.3165

1/4 Flexible Hose Nozzle (Outer Diameter = 17.8 mm)

Jet Configuration	Hole Diameter				
	0.6 mm	0.7 mm	0.8 mm	0.9 mm	1.0 mm
4 backward	-	-	-	90.45.3860	-
1 forward + 3 backward	90.45.4085	90.45.4290	90.45.4295	90.45.4100	-
1 forward + 4 backward	90.45.4145	90.45.4150	90.45.4155	90.45.4160	-
1 forward + 5 backward	90.45.4205	90.45.4210	90.45.4215	90.45.4220	90.45.4225
1 forward + 6 backward	90.45.4265	-	90.45.4275	90.45.4280	90.45.4285

Part no on the dark area

E&B SU JETİ MAKİNE SAN. ve TİC. LTD. ŞTİ.

İvedik Organize Sanayi Bölgesi 1444. Sokak No: 8 Ostim - ANKARA - TÜRKİYE
Phone: +90 312 394 12 70 (pbx) • Fax: +90 312 394 12 71
www.ebwaterjet.com • eb@ebsujeti.com.tr

N19

